


MS10 Chrome Adjustable Hook Stand w/ 8" Base

Parts: 8" Chrome Base (Round, Square, Trumpet)
Adjustable Chrome Upright (Outer Pole & Inner Hook Pole)

Note: If a part of this stand is missing or broken when received, please contact customer support via email at customerservice@advancedsalestech.com. Parts will be promptly replaced if we are notified within 10 days of receipt.

Using the Stand:

1. Attach the adjustable upright pole to the 8" base. Tighten pole until secure with the base.
2. To adjust the stand, twist the height adjustment screw counter clockwise, adjust the inner pole to desired height, then twist the height adjustment screw clockwise. The height adjustment screw secures the inner pole in place and you may need pliers (or similar tool) to tighten sufficiently to hold the inner pole in place.
3. The MS10 stand, although usable for other purposes, is designed for use with a wide variety of Hard Plastic Mannequin products such as: Hard Plastic Upper Torso & Panty/Brief Forms; Hard Plastic Toddler, Child, Teen, and Adult $\frac{3}{4}$ Forms; and Hard Plastic Male and Female Torso Forms. Stands will support approximately 4 lbs of weight.

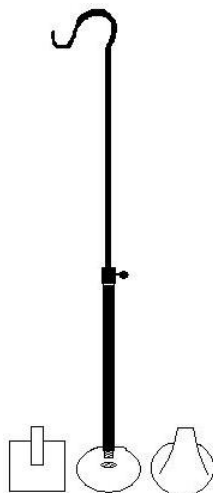

Warning: Warranty and return claims are void if stand is damaged when used for purposes other than those for which it is designed.

Copyright 2004-2011 Advanced Sales Technologies, LLC