


MS3 Chrome Adjustable Upright Stand w/ 8” Base

- Parts: 8” Chrome Base (Round, Square or Trumpet)
Adjustable Chrome Upright (5/8” Outer Pole & 3/8” Inner Pole)
Decorative Chrome Piece
Wooden Adapter (If ordered with an inflatable torso or panty/brief form)

Note: If a part of this stand is missing or broken when received, please contact customer support via email at customerservice@advancedsalestech.com. Parts will be promptly replaced if we are notified within 10 days of receipt.

Using the Stand:

1. Attach the 5/8” outer pole to the 8” base with the decorative piece near the base. Tighten decorative piece until secure with the pole. Tighten pole until secure with the base. Insert the 3/8” inner pole into the outer pole.
2. To adjust the stand, twist the height adjustment screw counter clockwise, adjust the inner pole to desired height, then twist the height adjustment screw clockwise. The height adjustment screw secures the inner pole in place and you may need pliers (or similar tool) to tighten sufficiently to hold the inner pole in place.
3. To use with an inflatable torso or panty/brief form, place the wooden adapter provided onto the top of the inner pole. Place the mannequin on the wooden adapter through the stand insert located on the bottom of the mannequin form.
4. The MS3 stand, although usable for other purposes, is designed for use with a variety of Inflatable Mannequin products such as Inflatable Torso Forms and Inflatable Panty/Brief Forms. Stands will support approximately 4 lbs of weight.

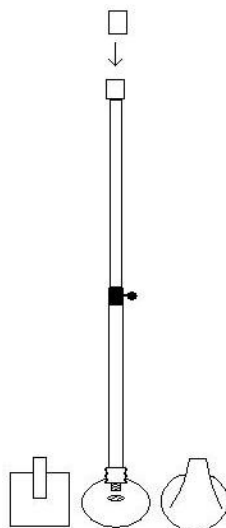

Warning: Warranty and return claims are void if stand is damaged when used for purposes other than those for which it is designed.