

MS6D Oval Wood Base Stand Aluminum, Adjustable Upright & Tabletop Center Support Instructions

Parts: Oval Base, Aluminum Adjustable Upright, Small Peg with screw & washer, Separate Screw and Washer, Rubber O-ring, Wooden Packing Protector

Note: If a part of this stand is missing or broken when received, please contact customer support via email at customerservice@advancedsalestech.com. Parts will be promptly replaced if we are notified within 10 days of receipt.

To Assemble Upright Stand:


1. Remove and discard any shipping protection from the stand. This includes the wooden packing protector from the top of the aluminum upright.
2. Remove screw & washer from the enclosed package. Insert screw through the washer and then through the bottom of the hole in the oval base.
3. Attach aluminum pole to the screw and tighten securely. A Phillips screwdriver is required to tighten the screw.

Using the Upright Stand:

1. Turn center pole clockwise to loosen the pole and adjust to the proper height. Turn center pole counter-clockwise to lock in place. Do not over tighten.
2. The MS6D stand, although operable with other purposes, is best used with Inflatable Mannequin products such as; Standard Torso Forms, Large Torso Forms, Child Torso Forms, Inflatable Panty/Brief Forms, Inflatable Full-Size Forms (limited stability) and Child Full Size Forms

To Assemble Tabletop Stand:

1. Remove peg screw & washer from the enclosed package. Insert screw through the washer and then through the bottom of the hole in the oval base.
2. Attach peg to the screw and tighten securely. A rubber o-ring has been provided to increase stability, if needed, when positioning the inflatable display form on the peg. Position the o-ring over the peg near the top of the peg. Slide display form over the peg until firmly seated.

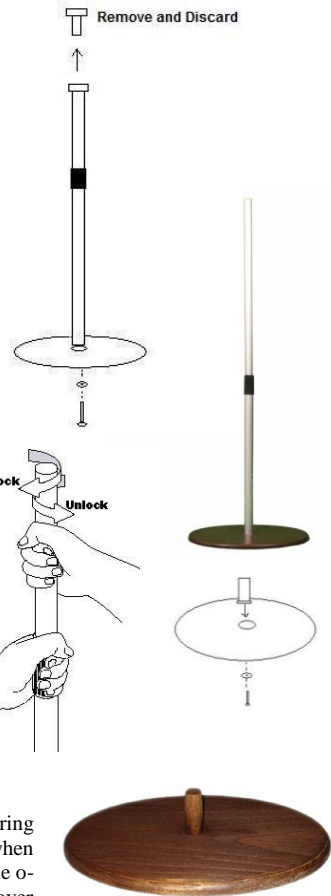

Warning: This stand is lightweight (2 lbs) and will only support lightweight display forms and apparel of a comparable weight, depending upon the display form, apparel style and the distribution of the weight.

Warranty and return claims are void if stand is damaged when used for purposes other than those for which it is designed.

Copyright 2004-20011 Advanced Sales Technologies, LLC