


MS7 Tripod Stand

Parts: 3 Curved Leg Pieces
1 Cylindrical Middle Piece
1 Decorative Circular Covering
1 Upright Pole

Note: If a part of this stand is missing or broken when received, please contact customer support via email at customerservice@advancedsalestech.com. Parts will be promptly replaced if we are notified within 10 days of receipt.

Using the Stand:

1. Slide the 3 curved leg pieces into the slots in the cylindrical middle piece. Place the decorative circular covering over the cylindrical piece, placing the screw through the center hole. Then attach the upright pole to the screw and tighten.
2. The MS7 stand, although usable for other purposes, is designed for use with a wide variety of Inflatable Mannequin products such as: Inflatable Standard Torso Forms, Inflatable Large Torso Forms, Inflatable Child Torso Forms and Inflatable Panty/Brief Forms. Inflatable Male and Female Full Size Mannequins and adapter may be used if buyer removes 6" off the top of the upright – use a hacksaw or other appropriate saw – stand may not be returned once upright has been cut. Stands will support approximately 5 lbs of weight.

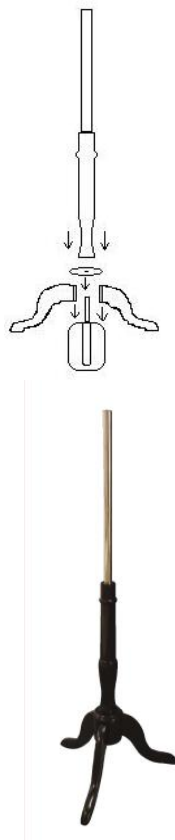

Warranty and return claims are void if stand is damaged when used for purposes other than those for which it is designed.

Copyright 2004-2011 Advanced Sales Technologies, LLC